


## Chlorine Meters for Field Analysis

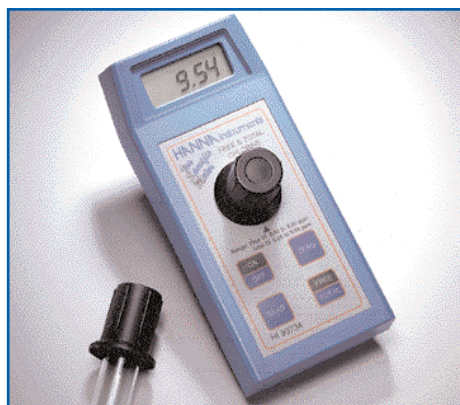

### Quick and Easy Chlorine Measurements with HI 93734

#### Ordering Information

HI 957xxC kit includes 2 cuvetts, Cal Check™ solutions, scissors, cuvet wiping tissue, battery and instructions in a rugged carrying case.

HI 95701, HI 95711 and HI 95734 are supplied complete with 2 cuvetts, battery and instructions.

### HI 96711

#### Free & Total Chlorine Meter

HI 96711 is an auto-diagnostic, micro-processor-based, portable photometer that benefits from HANNA instruments' years of experience as manufacturer of analytical instruments. The advanced optical system is based on a tungsten lamp and a narrow-band interference filter that allows highly accurate and repeatable readings.

HI 96711 measures free & total chlorine and features quick traceability system of the measured samples. Thanks to the i-Button® technology, this meter can associate a time and location label to every record. The meter can log up to 99 measurements in the internal memory and all stored data can be downloaded to a PC through the RS232 serial port and the HI 92000 software. The sample traceability system allows collection and management of data in a very simple and error free way. All measurements can be quickly organized by time or by sample. The i-Button® is mounted on the top of the meter and you just have to touch the one that identifies the sample location before performing measurement.

#### Accessories

##### Cal Check™ Kit

- HI 95701-11 Cal Check™ Kit for HI 95701 calibration
- HI 95711-11 Cal Check™ Kit for HI 95711 calibration
- HI 95724-11 Cal Check™ Kit for HI 95724 calibration
- HI 95734-03 Cal Check™ Kit for HI 95734 calibration
- HI 95761T Cal Check™ Kit for HI 95761 calibration
- HI 95762-01 Cal Check™ Kit for HI 95762 calibration

##### Reagents

- HI 93701-01 Powder reagents for free chlorine (100 tests) HI 95701, HI 96711, HI 93701, HI 95711 and HI 93711
- HI 93701-03 Powder reagents for free chlorine (300 tests) HI 95701, HI 96711, HI 93701, HI 95711 and HI 93711
- HI 93711-01 Powder reagents for total chlorine (100 tests) HI 95711, HI 96711 and HI 93711

- HI 93711-03 Powder reagents for total chlorine (300 tests) HI 95711, HI 96711 and HI 93711
- HI 93701-T Liquid reagent (300 tests) for HI 95711 and HI 93711
- HI 93734-01 Liquid reagents (100 tests) for free and total chlorine for HI 95734 and HI 93734
- HI 93734-03 Liquid reagents (300 tests) for free and total chlorine for HI 95734 and HI 93734
- HI 93701-F Reagents for free chlorine (300 tests) for HI 95724
- HI 93701-T Reagents for 300 tests free chlorine and 100 tests for total chlorine for HI 95724
- HI 93711-D3 DPD3 reagents (200 tests) for free and total chlorine for HI 95724

For detailed information about these products, see section K.



#### Ordering Information

HI 96711 is supplied complete with 2 measuring cuvetts, 5 i-Buttons® with holder, batteries, rugged carrying case and instructions.

For detailed information about this product, see page K53.