




Level control is very important in many industrial applications, especially for process adjustments using aggressive chemicals. Our sensor bars are built with stainless steel for long life even in harsh conditions.

They are easy to install and ideal for monitoring tanks and water conditioning plants.

The HI 7874 transmitter has been designed to be combined with the HI 7871 and HI 7873 level controllers.

The transmitter is housed in a durable and waterproof ABS body, and allows the user to easily adjust the length of the sensor bars according to the specific need.

HI 7874 is supplied with a sturdy mounting bracket for quick and easy installation.

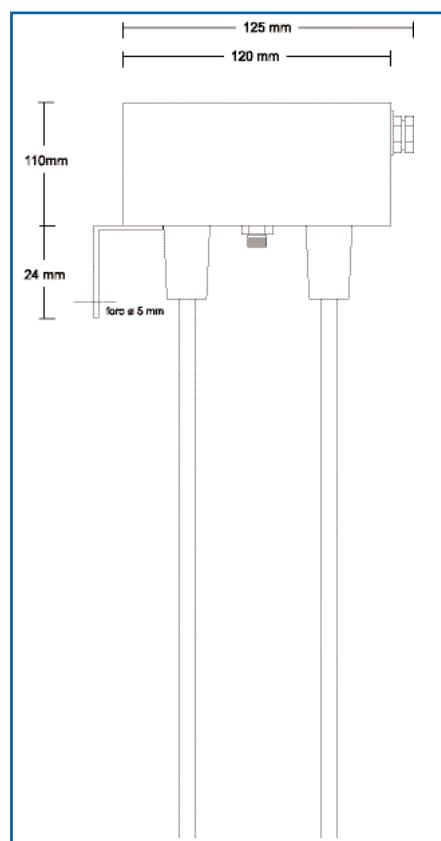

### Specifications

HI 7874	
Transmission	max 100 meters (330 feet)
Electrical Connection	2-wire terminal
Level Adjustment	high, low and overflow
Sensor Bars	3 or 4 (not included) (HI 731324 pack of 5 pcs.)
Power Supply	from level controller
Environment	0 to 50°C (32 to 122°F); RH max 100%
Weight	550 g (1.2 lb.)

### Accessories

HI 731324 Stainless steel threaded measuring bars (5 pcs.)

### Ordering Information

HI 7874 is supplied complete with mounting bracket and instructions.